

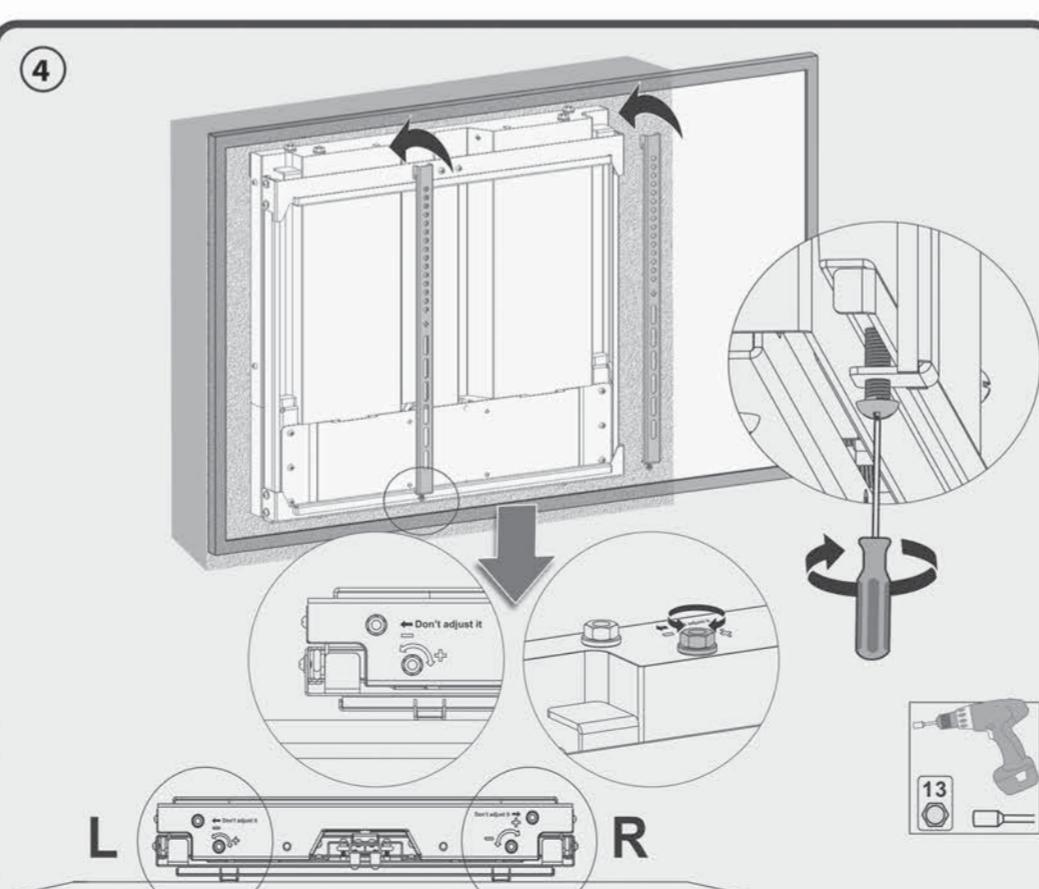
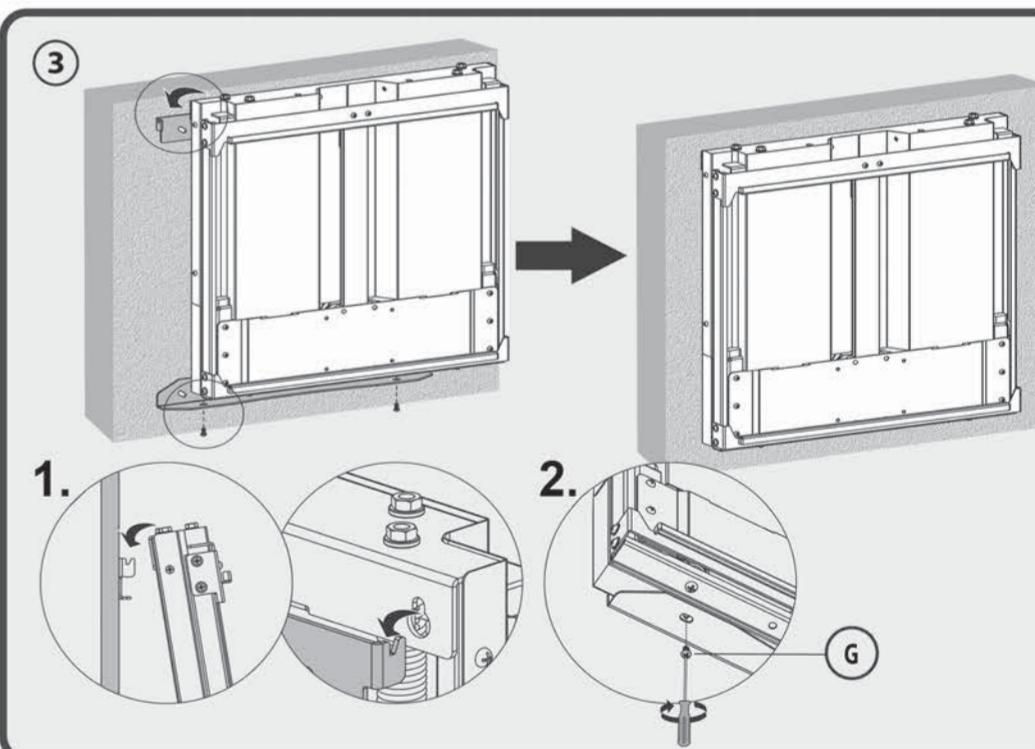
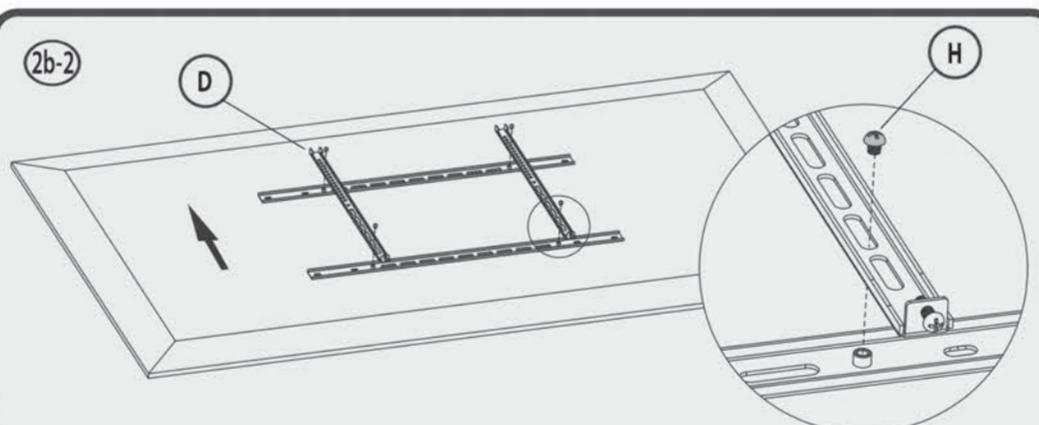
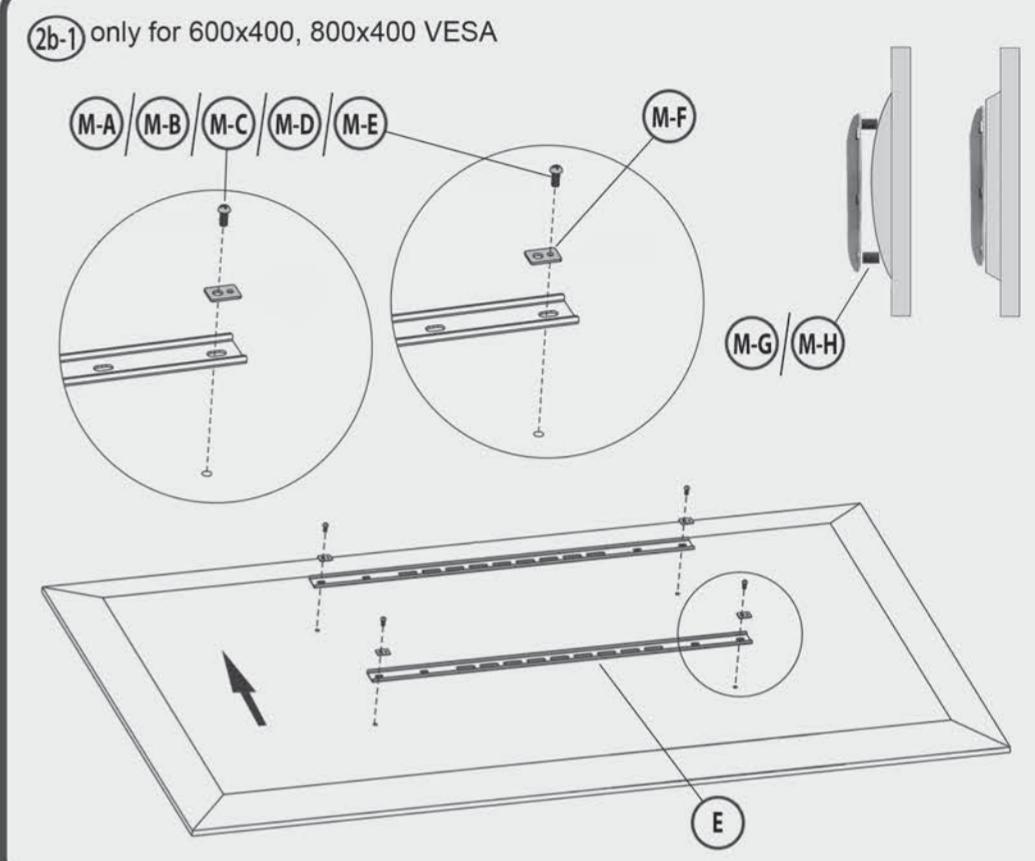
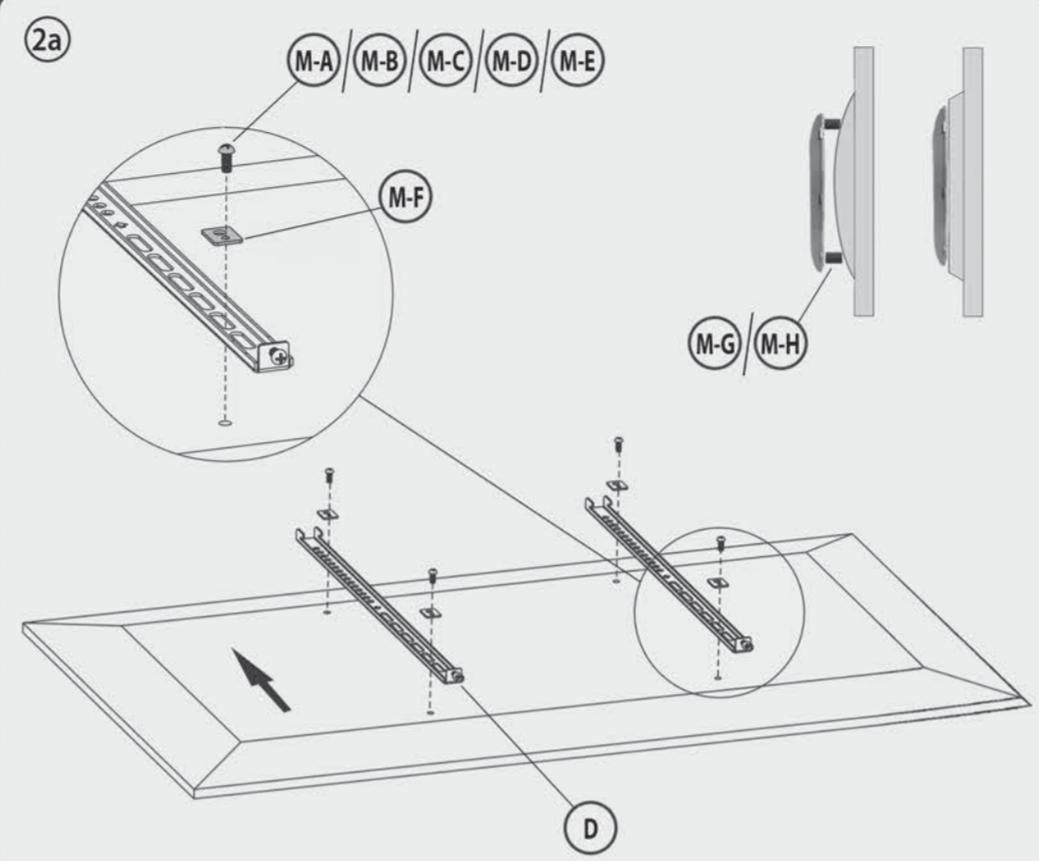


M-A	M5x14 (x4)	M-E	M8x50 (x4)	W-A	(x6)	B	(x1)	G	(x2)
M-B	M6x14 (x4)	M-F	(x4)	W-B	(x6)	C	(x1)	H	(x4)
M-C	M6x30 (x4)	M-G	(x8)	W-C	(x6)	D	(x2)	I	(x1)
M-D	M8x30 (x4)	M-H	(x8)			E	(x2)		

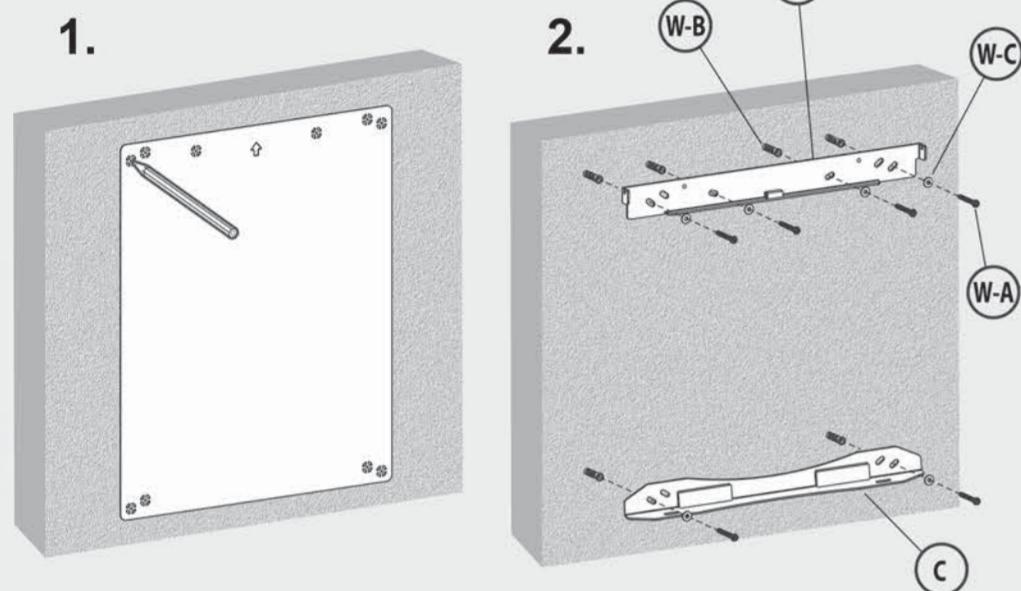

The mount arrives with a default balance setting. Two balance bolts (one located on each side-left and right) must be adjusted to set proper balance using a drill as shown. Adjust the bolts clockwise/counter-clockwise (5 sec recommended for each action), alternating between each side until it has achieved a perfect balance.

Die Halterung wird mit einer Standardeinstellung für das Gewicht geliefert. Zwei Ausgleichsbolzen (je einer links und rechts) müssen eingestellt werden, um das richtige Gegengewicht mit einer Bohrmaschine, wie gezeigt, einzustellen. Stellen Sie die Schrauben im / gegen den Uhrzeigersinn ein (5 Sek. empfohlen für jede Aktion). Wechseln Sie zwischen beiden Seiten, bis eine perfekte Balance erreicht ist.

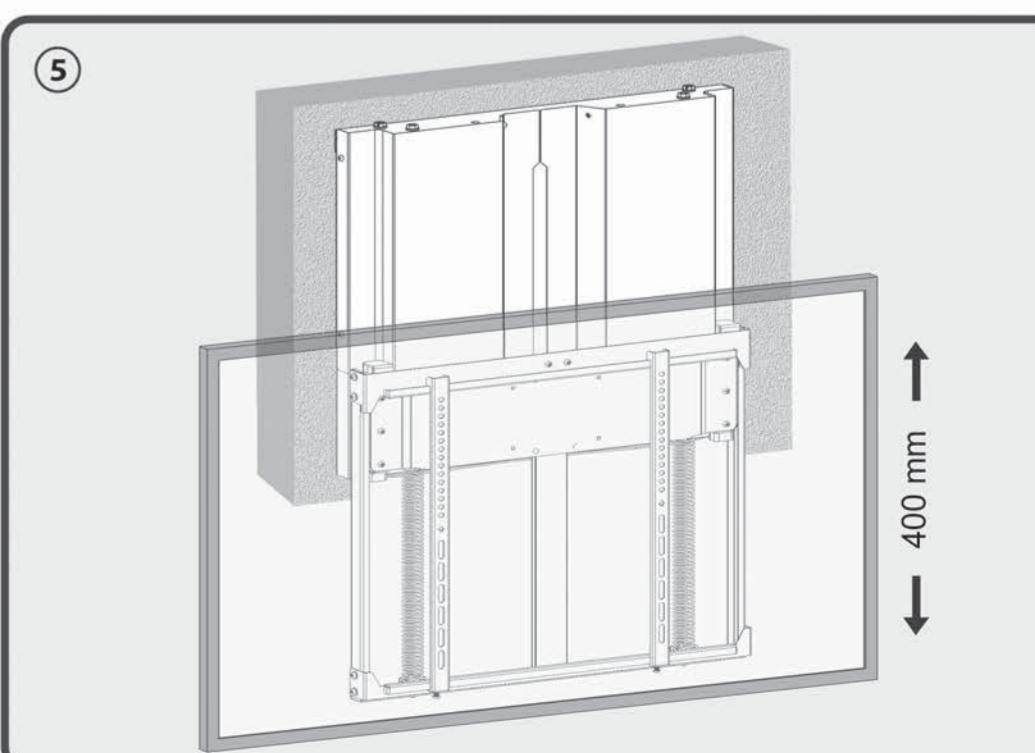

# MonLines individual