

Großes Desk Tray | mit USB-Adapter


CAD Folien

.dwg CAD files available to download from pCon Catalog/pCon.Box


OFML data available on all pCon platforms




Maßzeichnungen

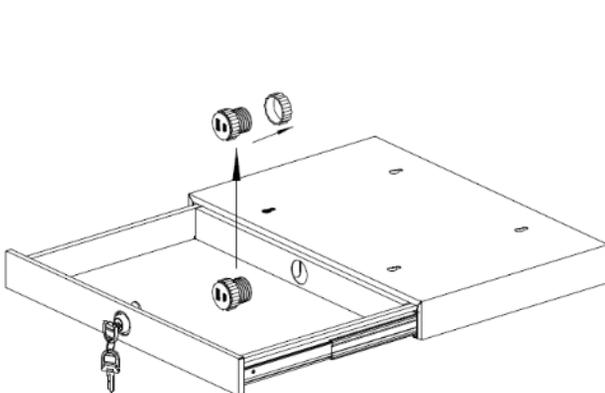

STEP 1 :Open the drawer, remove the USB extension(5V3.1A), and unscrew the plastic nut

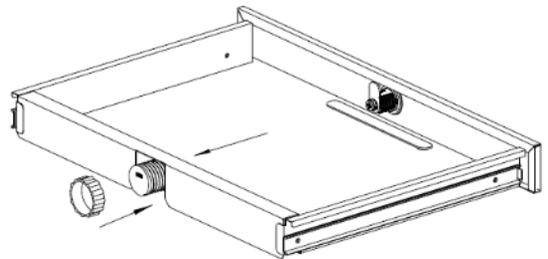

STEP 2 : Insert the USB extension (5V3.1A) into the hole at the back of the drawer and secure it with a plastic nut

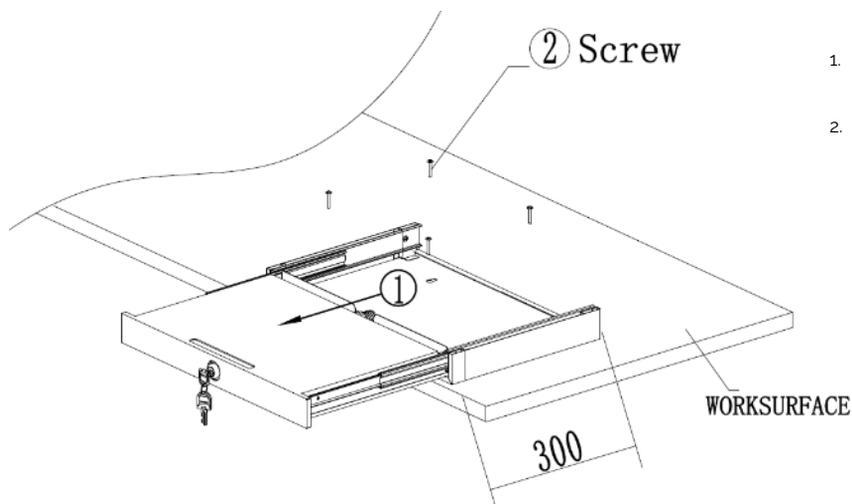

1. Put the drawer under the work surface and pull out the drawer
2. Screw the box to the work surface

Every effort has been made to ensure that information provided in this document is up to date and accurate. However, Fellowes cannot guarantee and assumes no legal liability or responsibility for the accuracy or completeness of the information provide. In case of any query please contact us as www.Fellowes.com/locations.