



Cable Tray Open

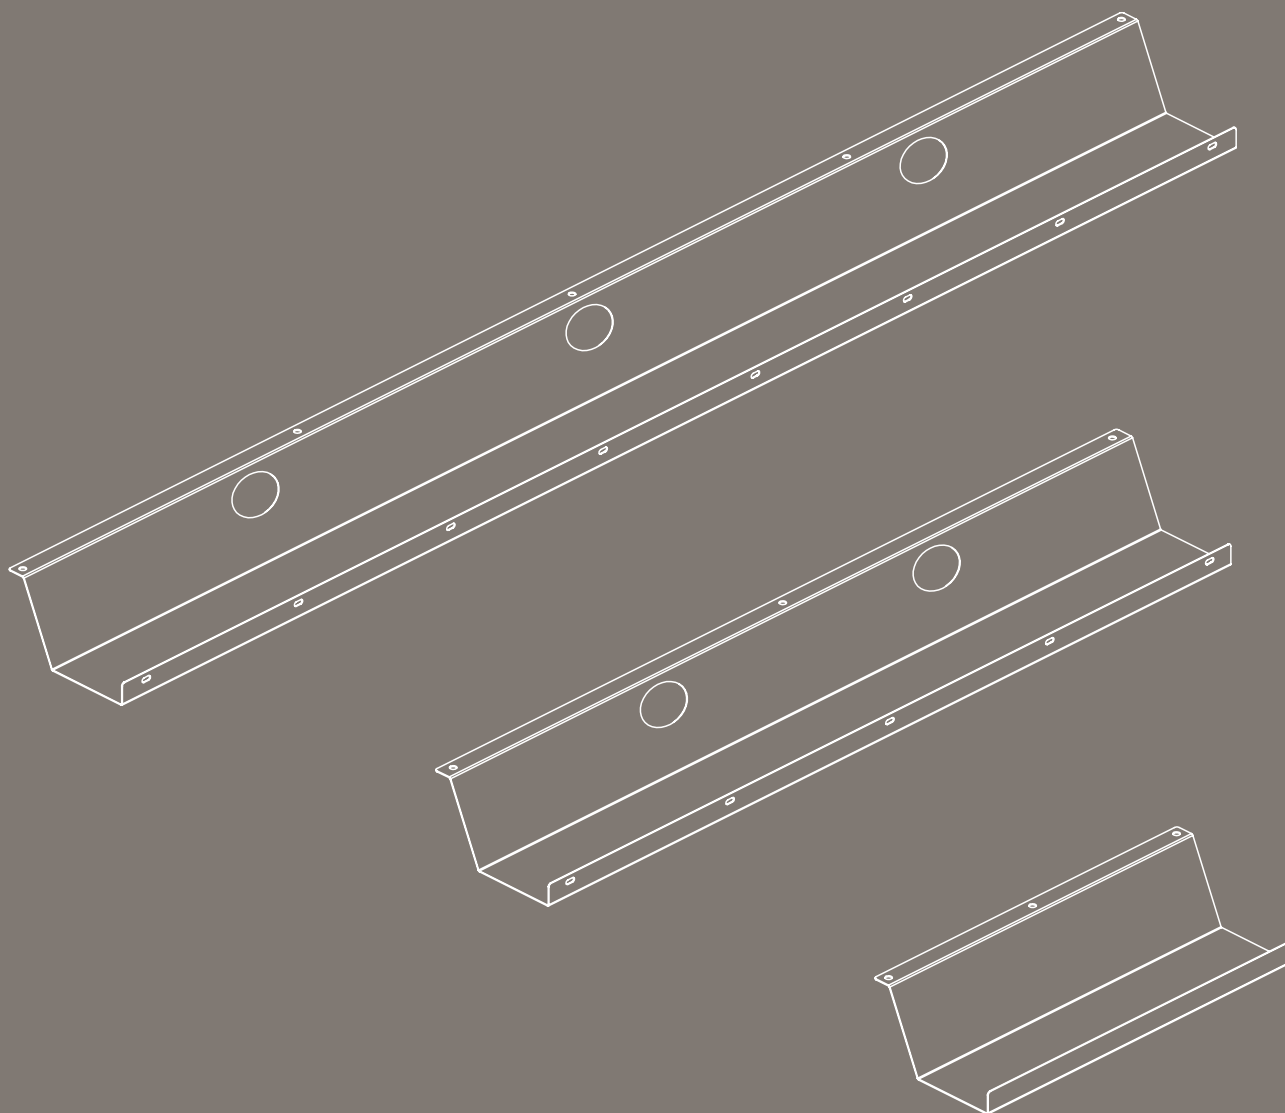


Parts

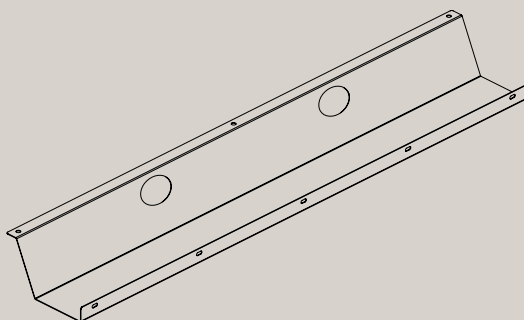


1 x Cable Tray Open

What you will need

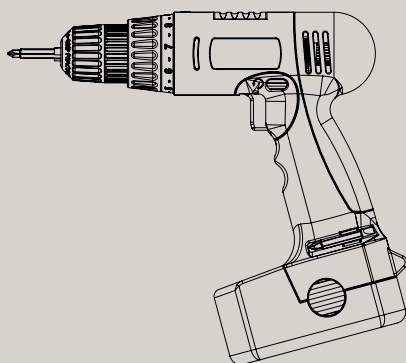


1 x Electric Drill

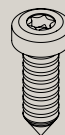


3-5 x Self-tapping screws

Step 1

Place the Cable Tray Open underneath the table, aligned parallel with the edge. Carefully insert the self-tapping screws into the holes of the Cable Tray Open, and use the electrical drill to tighten them securely

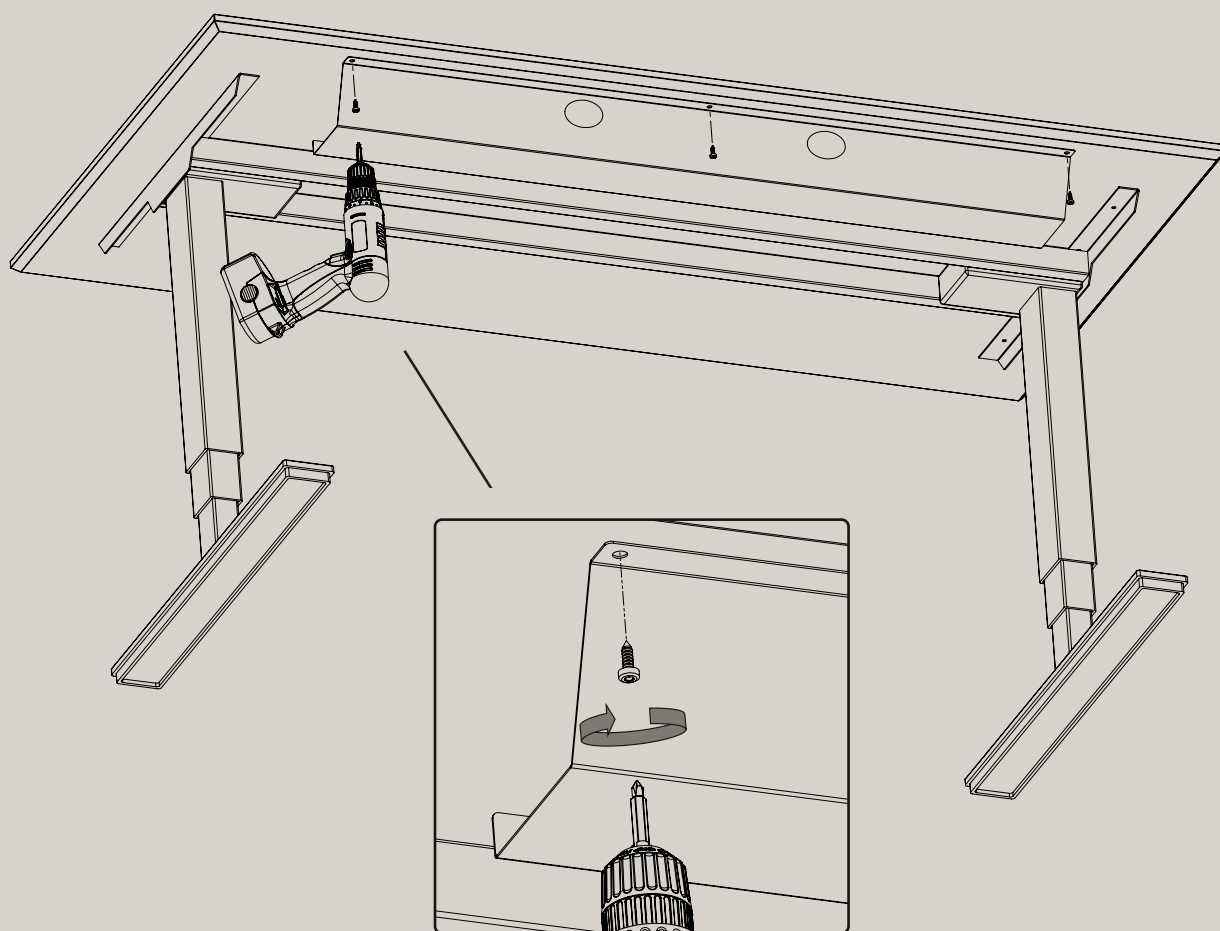

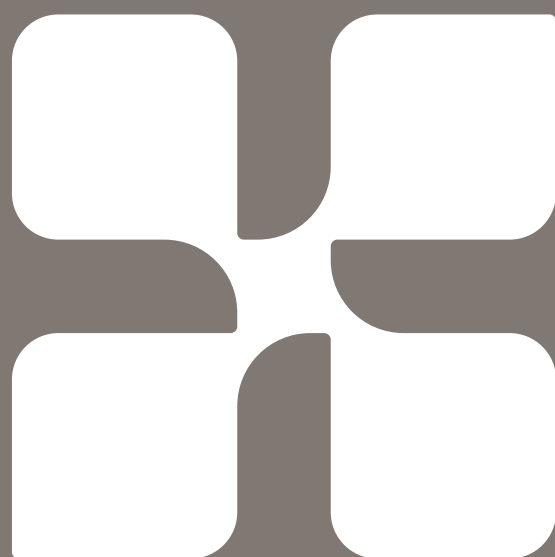

apto plus